






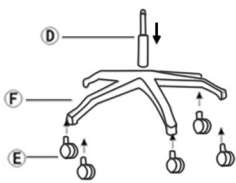



# ASSEMBLY INSTRUCTION

## Parts & Installation Procedure


Headrest	Back	Seat	Armrests	Gaslift	Base	Castors
						
(K) × 1	(A) × 1	(B) × 1	(C) × 2	(D) × 1	(F) × 1	(E) × 5



Step 1

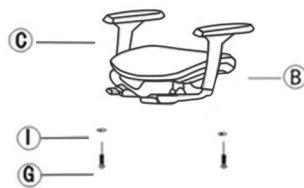

Step 2

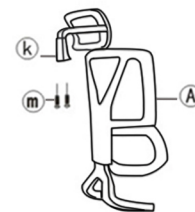

 
 


 
Step 3



Step 4



Step 5

 (G) × 4 M6*20mm	 (H) × 4 M8*20mm	 (I) × 6
 (J) × 1 4mm	 (M) × 2 M6*16mm	

## Installation Instructions

1. Take the castors and push them into the 5 star base, and place the gas strut into 5 star base, it has a tapered fit.
2. Attach armrests into the base of chair(Screw G+ Gasket I)
3. Attach headrest to the backrest(Screw M)
4. Attach the backrest onto the mechanism(Screw H+ Gasket I)
5. Connect the chair mechanism with gaslift on the base

## Warning

Please read the instructions carefully before assembly,and assemble the product properly according to the instructions, don't put in use of the product before it is fully assembled.

\*To avoid product damage and personal injury,assemble the product properly.

\*To avoid product damage and personal injury,please check the product's load capacity and do not support user's whole body on the chair arms. \*To avoid personal injury,place the product on the flat ground.

\*Do not stand on the product.

\*To avoid personal injury,don't use the damaged product,and dispose it properly.

\*Indoor use only.

\*Only trained people should repair the back angle adjustment component with energy accumulator contained.

\*Please keep the instructions in case of further use.